

法輪大法好

FALUN DAFA IS GOOD

多功能數位錄放音機

Digital Recording & Playing Amplifier

FM100 使用手冊

INSTRUCTION MANUAL

發行：益群書店股份有限公司 電話：886-2-25533123
地址：台北市重慶北路二段229-9號 傳真：886-2-25531299
網址：www.yihchyun.com.tw email:yihchyun@ms54.hinet.net



多功能數位錄放音機

FM100 使用手冊

(中文版)



目 錄

錄音內容 / 資料夾及檔案說明.....	5
FM100主機使用注意事項	6
FM100專用充電式鋰電池使用注意事項	6
FM100專用充電式鋰電池充電方式	6
FM100各部名稱 / 控制面板按鍵說明	7
按鍵功能說明.....	7
FM100按鍵功能使用說明	8
FM100充電變壓器規格	9
FM100電池電力顯示/電池沒電的處理	9
FM100燈號顯示說明	9
FM100操作說明	
一. 放音	10
二. 停止放音	10
三. 音量調整	10
四. 單曲重播	10
五. 記錄播放進度	11
六. 播放記錄進度	11
七. 自行設定播放曲目順序	11
八. 錄音	12
九. 曲目播放順位說明	12
十. 檔案刪除功能	12
十一. 與電腦連接	12
十二. 補救被刪除或損壞的檔案	13
十三. 抽取式硬碟機	13
FM100保固說明	13

TABLE OF CONTENTS

THE CONTENT OF THE RECORDING.....	19
FOLDERS & FILES	19
ATTENTION/FM100/LI-BATTERY.....	20
CHARGE.....	20
NAMES OF ALL PARTS.....	21
CONTROL PANEL.....	21
QUICK OPERATION INSTRUCTION.....	22
CHARGER TRANSFORMER	23
INDICATION OF BATTERY-POWER.....	23
BATTERY POWER EXHAUSTION.....	23
INSTRUCTION OF LAMP.....	23
OPERATION	
(1)PLAYING.....	24
(2)STOP.....	24
(3)VOLUME ADJUSTMENT.....	24
(4)REPEAT MODE.....	24
(5)RECORDING PLAYBACK PROGRESS.....	25
(6)RECALL PLAYBACK PROGRESS.....	25
(7)SELF-ARRANGED PLAYLIST	25
(8) RECORDING.....	26
(9) PLAYBACK LIST.....	26
(10) DELETE	26
(11) CONNECT WITH PC.....	27
(12) HOW TO REDEEM FILES.....	27
WARRANTY AND OPERATION INSTRUCTION.....	27

FM100 功能說明

一. 錄音內容

曲目	內容	曲目	內容
1	發正念	11	講法一講
2	第一套功法	12	講法二講
3	第二套功法	13	講法三講
4	第三套功法	14	講法四講
5	第四套功法	15	講法五講
6	第五套功法	16	講法六講
7	普度	17	講法七講
8	濟世	18	講法八講
9	空白(緩衝)	19	講法九講
10	空白(緩衝)	20	發正念

1. FM100機內記憶體錄製的煉功音樂、講法內容，係由李洪志大師授權，版權所有，翻錄必究
2. 第9、第10曲為緩衝，已錄空白內容於其中，不可取消
3. 播音順序依上列曲目順序循序播放，若因個人需求須調整播放順序時，可自行設定播放順序（參考第11頁）
4. 曲目1是樂聲版發正念，曲目20是鐘聲版發正念。

二. 資料夾及檔案說明

1. **DAFAGOOD(資料夾)**：法輪大法專用資料夾，FM100的錄音內容即存放此資料夾裡。此資料夾勿任意刪除或更名，否則易造成播放故障。
2. **DAFAGOOD\DVR(資料夾)**：專職存放操作提示音資料夾錄有SOUND1、SOUND2、SOUND3三個提示音檔案，如果不小心刪除，相關操作將不會再發出提示音，但並不影響整體功能運作（補救刪除檔案請參考第13頁）
3. **FW_INFO.INI(檔案)**：版本資訊檔案
4. **DATA.DAT(檔案)**：操作紀錄檔案

FM100 主機使用注意事項

1. 本機禁止高溫、重摔、重壓、雨淋，注意防潮
2. 本機結構精密，請勿自行拆裝、重組或變更設計內容
3. 本機僅適用專用鋰電池，一般市售鎳氫電池不可使用
4. 本機是法輪大法專用收音機。所有音源資料皆存放本機裡，未裝耳機可直接小音量收音輸出，將耳機連接本機耳機裝置孔可透過耳機收聽使用
5. 本機為方便的錄收音工具，但請尊重音源所有權人之權益，請取得合法音源版權後才使用
6. 本機使用之電池、充電器皆有特殊規格，請勿任意使用代用品，避免損傷機體
7. 無法正常播放音樂時，請檢查燈號異常狀態(第9頁)

FM100 專用充電式鋰電池使用注意事項

1. 本電池為高電壓 (3.7V) 充電式鋰電池，需配合專用充電器充電，錯用充電器會造成電池或主機損壞
2. 本電池嚴禁用於其他電器設備 (電壓不相容)
3. 電池避免高溫、潮濕、短路、遠離火源、兒童
4. 專用鋰電池可播音與充電同時進行 (邊聽邊充電)
5. 電池若長時間閒置不用，禁止閒置存放在FM100裡，電池請充飽電後取出，。
6. 電池為消耗性配備，若有使用上的疑問請於售出一個月內提出送修，售出後一個月則需酌收維修費用。
7. 為維護機體正常運作，建議電池使用二年後，應將電池淘汰換新。


FM100 專用充電式鋰電池充電方式

1. 將電池置入FM100電池安裝槽，注意正負極方向，連接專用充電器後即開始充電，或使用USB線連接電腦開始充電
2. 從弱電到充飽約需3小時，電量飽和約可播放10小時
3. FM100出現弱電警示時為最佳充電時機
4. 充電時，播放中曲目燈恆亮，10號燈閃爍
5. 充飽電後，播放中曲目燈恆亮，10號燈熄滅

FM100 各部名稱



控制面板按鍵說明

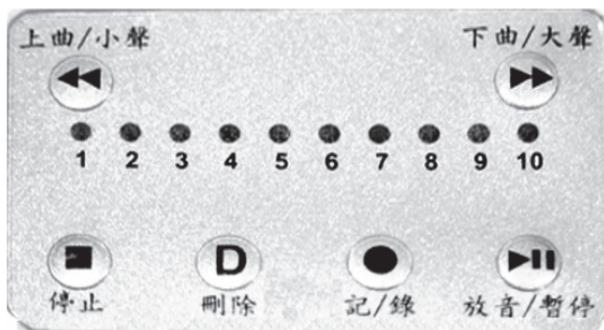

按鍵功能說明

- ◀◀ 上曲/小聲：向前選曲/音量減小聲；播放沒電記憶
- ▶▶ 下曲/大聲：向後選曲/音量加大聲；播放設定順序
- 1-10燈號：播放曲目所在位置、調整音量顯示刻度
- 停止：停止播放、停止錄音、記錄播放音量
- D 刪除：刪除錄音曲目/啟動USB功能(連接電腦時)
- 記錄：記錄播放進度、錄音、錄音暫停、錄音繼續
- ▶|| 播放/暫停：曲目播放、暫停播放、繼續播放、單曲重播設定、解除單曲重播設定、播放記錄進度

FM100 按鍵功能使用說明

按 鍵	狀 態	動 作	說 明
◀◀ 上曲/小聲鍵	待機	短按	選擇上一曲目
		長按	播放沒電記憶
	放音中	短按	降低音量一度
		長按	音量連續降低
▶▶ 下曲/大聲鍵	待機	短按	選擇下一曲目
		長按	播放自行設定曲目順序
	放音中	短按	加大音量一度
		長按	音量連續加大
▶ 放音/暫停鍵	待機	短按	播放曲目
		長按	播放記憶進度
	放音中	短按	暫停播放/繼續播放
		長按	設定單曲重播/解除設定
■ 停止鍵	放音中	短按	播放中短按，停止播放 錄音中短按，停止錄音
		長按	播放中長按，停止放音並 記錄播放音量
● 記/錄鍵	待機	短按	開始錄音
		長按	自行設定曲目播放順序
	放音中 錄音中	長按	記憶播放進度
		短按	暫停錄音/繼續錄音
D 刪除鍵	待機	短按	刪除錄製音樂檔/ 再短按，確定刪除
		長按	用USB線連接電腦時， 啟動檔案傳輸模式

FM100 充電變壓器規格(全世界通用型)

1. 充電變壓器為全世界通用型(100V-240V)，無須切換電壓即可直接使用
2. 請勿使用其他電器產品充電器進行充電，以避免傷害機體

FM100 電池電力顯示

- 一. 電力充足時:工作中的曲目燈常亮
- 二. 弱電警示:播放曲目燈每2秒閃爍一次
- 三. 沒電警示:停止播放，每5秒發出一短聲警示(持續40秒)

FM100 電池沒電的處理

1. 電池弱電狀態(快沒電)，播放中的曲目燈每2秒閃爍一次，此時音量5度約還可播音10分鐘。
2. 播放時電池由弱電變成沒電狀態，FM100會自動記錄放音進度，並停止放音，同時每5秒發出一短響警示(持續40秒)，此時請立即關機並更換一組有電電池。
3. 電池換好後，電源打開，開機測試的燈號顯示結束後，請按「上曲鍵」2秒，即從前次沒電的地方接續放音。

FM100 燈號顯示說明

燈號	燈號顯示	狀態說明
正常	10燈同時閃三次	開機測試
	播放中的曲目燈常亮	正常播放狀態
	播放曲目燈每2秒閃一次	電池快要沒電提示
	2. 4. 6. 8. 10號燈常亮	透過USB線連接電腦
異常	10燈依序閃動	記憶卡中無資料
	10燈常亮	記憶體故障或當機

FM100 操作說明

一. 收音

1. 打開開關，開機燈號測試(10顆燈同時閃3次)後，燈號停在1號燈
2. 按上曲鍵或下曲鍵選擇播放曲目
3. 輕按收音鍵一下，開始播放曲目

二. 停止收音(「短按」與「長按」有不同功能)

1. 收音中，輕壓停止鍵一下(短按)，FM100停止收音
2. 收音中，按住停止鍵2秒(長按)，FM100停止收音並發出一嗶聲警示，記錄目前播放音量，下次以此音量開始播放。

三. 音量調整

1. 收音中才能夠調整音量播放大小，每一燈號細分為2度音，共計10個燈號，20度音
2. 收音中加大音量(1)大聲鍵按一下，音量加大一度
(2)大聲鍵按住不放，音量連續加大
3. 收音中減小音量(1)小聲鍵按一下，音量減小一度
(2)小聲鍵按住不放，音量連續減小

【注意】

音量調整後，如果希望下次以此音量開機，停止收音時按住停止鍵2秒(發出一嗶聲提示)，系統會更新音量記錄

四. 單曲重播

1. 設定單曲重播

- (1)先選擇欲重播曲目，輕按播放鍵，開始播放
- (2)曲目播放中按住收音鍵2秒
- (3)播放曲目會停滯播放1秒(重播設定)，然後再繼續播放

2. 解除單曲重播設定

- (1)FM100正在播放設定重播的曲目
- (2)重播過程中，按住收音鍵2秒
- (3)播放曲目會停滯播放1秒(設定提示)，然後再繼續播放

五. 記錄播放進度(聽講法時可記憶播放進度)

播放中可記錄播放進度，下回由播放記錄位置繼續放音

1. 放音中按住記錄鍵2秒，FM100發出2聲嗶聲提示
2. 嗶聲提示代表設定成功，曲目停止播放，關機

六. 播放記錄進度(接續聽講法進度)

1. 電源打開，開機測試燈號顯示後，燈停在1號位置
2. 按住放音鍵2秒，自動從上次記憶播放進度點開始播音

七. 自行設定播放曲目順序(可設定多曲重播)

1. 設定方法

- (1) 待機狀態下按住記錄鍵2秒，FM100發出2聲嗶聲提示
- (2) 利用下曲鍵和上曲鍵選擇設定曲目
- (3) 輕按記錄鍵一下，FM100發出1聲嗶聲提示
- (4) 重複步驟2及步驟3依序將播放順序設定完成
- (5) 按停止鍵，FM100發出2短嗶聲提示，結束設定

2. 自行設定曲目順序如何播放

- (1) 待機狀態按下曲鍵2秒，依設定順序開始播放

【舉例】重新自行設定煉功「播放順序」如下：

神通加持→佛展千手→貫通兩極→法輪周天→法輪椿法

【設定步驟】

1. 開機→10個燈號全閃3次→開機測試完成
2. 按住 ● 記錄鍵2秒，FM100發出2聲嗶聲提示
3. 按▶▶下曲鍵前進燈號停留在6
4. 再按 ● 記錄鍵一下→FM100發出1聲嗶聲提示
5. 按◀◀上曲鍵後退燈號停留在2
6. 再按 ● 記錄鍵一下→FM100發出1聲嗶聲提示
7. 按▶▶下曲鍵前進燈號停留在4
8. 再按 ● 記錄鍵一下→FM100發出1聲嗶聲提示
9. 按▶▶下曲鍵前進燈號停留在5
10. 再按 ● 記錄鍵一下→FM100發出1聲嗶聲提示
11. 按◀◀上曲鍵後退燈號停留在3
12. 再按 ● 記錄鍵一下→FM100發出1聲嗶聲提示
13. 按 ■ 停止鍵一下，FM100發出2短聲提示，結束設定

【播放自行設定煉功順序】

1. 開機→10個燈號全閃3次→開機測試完成
2. 按下曲鍵2秒，從神通加持法(自訂播放順序)開始播放
3. 設定曲目全部播放完後，會再跳回設定第一曲依序播放

八. 錄音(透過USB傳輸線進行音樂檔案拷貝複製)

1. 本機USB插槽(USB線)支援USB2.0檔案傳輸
2. FM100接受MP3檔案播放，將USB傳輸線連接電腦與FM100，直接將其它音樂檔案拷貝複製到FM100根目錄後即可播放
3. FM100僅能播放"DAFAGOOD"資料夾內與根目錄下的音樂檔案，將音樂檔案存入根目錄下建立的新資料夾將無法播放

九. 曲目播放順位說明

1. "DAFAGOOD"資料夾內的音樂檔案是第一播放順位，依序播放曲目1到曲目20
2. FM100根目錄下的音樂檔案是播放第二順位，新拷貝存入曲目將自第21曲開始排列播放

十. 檔案刪除功能

1. "DAFAGOOD"資料夾已設定保護，"刪除鍵"無法刪除檔案
2. "刪除鍵"可刪除FM100根目錄下的音樂檔案，設定如下
 - (1)待機狀態下，利用上曲鍵或下曲鍵選定至欲刪除曲目
 - (2)短按刪除鍵，系統將播放此曲內容3秒
 - (3)在播放中再短按刪除鍵一次，確認刪除此曲
 - (4)設定曲目刪除後，後續曲目編號自動向前遞補。3秒內若未再按第2次刪除鍵，刪除曲目視為誤按，回到待機狀態

十一. 與電腦連接

1. 適用Windows ME/2000/XP/Vista/7系統，可直接透過USB線與電腦連接傳輸資料，不適用麥金塔系統
2. FM100不支援Windows 98或更早期作業系統
3. FM100連接電腦時可邊聽邊充電，FM100此時為播放模式
4. 若希望FM100連接電腦傳輸檔案，連接USB線後，按住"D"鍵2秒後，2.4.6.8.10號燈亮，FM100此時為檔案傳輸模式

十二. 補救被刪除或損壞的檔案

FM100的檔案不小心被刪除或有損壞時，可依下列步驟補救

1. 向同修借一台FM100主機與電腦連接，將主機內的資料複製到電腦中
2. 解除連結FM100，連接欲重灌資料的FM100與電腦
3. 複製檔案到FM100後，解除FM100與電腦連結

【注意】

- (1). SOUND1、SOUND2、SOUND3要複製在DVR資料夾中
- (2). 執行「刪除功能」或透過USB增減檔案後，原先設定的「記憶進度」、「停電記憶」、「自訂播放順序」都將取消，須重新設定。

十三. 抽取式硬碟機

USB線與電腦連接正確後，在電腦上可以看到抽取式硬碟（即FM100），使用方式同於一般電腦硬碟機，可做檔案存取、複製、刪除……。

FM100 保固說明

1. FM100配件如下：
FM100主機x1；專用鋰電池x1；充電器x1；耳機x1；USB傳輸線x1
2. 本機自購買日起保固一年，保固期間內免費維修
3. 充電器、電池、耳機、USB線屬消耗材料，不在保固範圍
4. 本機使用之電池、充電器皆有特別規格，勿任意使用代用品，避免損傷機體
5. 可依個人使用需求另行選購FM100專用充電鋰電池



Digital Recording & Playing Amplifier

**FM100
INSTRUCTION MANUAL**

(English)



TABLE OF CONTENTS

THE CONTENT OF THE RECORDING.....	19
FOLDERS & FILES	19
ATTENTION/FM100/LI-BATTERY.....	20
CHARGE.....	20
NAMES OF ALL PARTS.....	21
CONTROL PANEL.....	21
QUICK OPERATION INSTRUCTION.....	22
CHARGER TRANSFORMER	23
INDICATION OF BATTERY-POWER.....	23
BATTERY POWER EXHAUSTION.....	23
INSTRUCTION OF LAMP.....	23
OPERATION	
(1)PLAYING.....	24
(2)STOP.....	24
(3)VOLUME ADJUSTMENT.....	24
(4)REPEAT MODE.....	24
(5)RECORDING PLAYBACK PROGRESS.....	25
(6)RECALL PLAYBACK PROGRESS.....	25
(7)SELF-ARRANGED PLAYLIST	25
(8) RECORDING.....	26
(9) PLAYBACK LIST.....	26
(10) DELETE	26
(11) CONNECT WITH PC.....	27
(12) HOW TO REDEEM FILES.....	27
WARRANTY AND OPERATION INSTRUCTION.....	27

目 錄

錄音內容 / 資料夾及檔案說明.....	5
FM100主機使用注意事項	6
FM100專用充電式鋰電池使用注意事項	6
FM100專用充電式鋰電池充電方式	6
FM100各部名稱 / 控制面板按鍵說明	7
按鍵功能說明.....	7
FM100按鍵功能使用說明	8
FM100充電變壓器規格	9
FM100電池沒電的處理	9
FM100燈號顯示說明	9
FM100操作說明	
一. 放音	10
二. 停止放音	10
三. 音量調整	10
四. 單曲重播	10
五. 記錄播放進度	11
六. 播放記錄進度	11
七. 自行設定播放曲目順序	11
八. 錄音	12
九. 曲目播放順位說明	12
十. 檔案刪除功能	12
十一. 與電腦連接	12
十二. 補救被刪除或損壞的檔案	13
十三. 抽取式硬碟機	13
FM100保固說明	13

THE CONTENT OF THE RECORDING

NO	Music	NO	Music
1	ZHENG-NIAN	11	Lecture 1
2	Exercise 1	12	Lecture 2
3	Exercise 2	13	Lecture 3
4	Exercise 3	14	Lecture 4
5	Exercise 4	15	Lecture 5
6	Exercise 5	16	Lecture 6
7	Pudu	17	Lecture 7
8	Jishi	18	Lecture 8
9	(buffer)	19	Lecture 9
10	(buffer)	20	ZHENG-NIAN

- 1.The content of FM100 has been authorized by Master Li Hongzhi, with the copyright exclusively held. Duplication of the recording will surely be investigated.
- 2.Track 9 & 10 are buffers , can't be deleted.
- 3.The playlist is according to the upper row order, you can set up self-arranged playlist (refer page 25)
- 4.The Track20 is the ZHENG-NIAN of ding version.

FOLDERS & FILES

- 1.DAFAGOOD(folder) : DAFA files (TRACK1-TRACK20)
Do not delete or changes the folder's name, otherwise the broadcast breakdown.
- 2.DAFAGOOD\DVR(folder) : 3 kinds of alarm sounds (files)
There are three alarm files(sound 1 、sound 2 、sound 3) in the DVR folder. Delete them will lose alarm sounds , FM100 can still work but no alarm sound (refer page 27 to redeem alarm files)
- 3.FW_INFO.INI(file) : Edition information
- 4.DATA.DAT(file) : Operation record

ATTENTION (OF FM100)

- 1.The FM100 is banned high temperature, heaving, heavy pressure, drenching, paying attention to moisture-proof
- 2.Please don't disassemble or assemble or change the design content
- 3.FM100 is only suitable for the Lithium battery.**
- 4.All sounds that saved in FM100. You can amplify the music or wear the earphone to listen.
- 5.Please respect the copyright.
- 6.When FM100 is unable playing the music, please check the lamp signal abnormal state (refer page23)

ATTENTION (OF LITHIUM-BATTERY)

- 1.High-voltage,rechargeable lithium-battery (3.7V)**
- 2.The battery prohibited used in other electrical equipment .**
- 3.Both battery and adapter have special specification ,do not use substitute item to avoid damaging FM100 .**
- 4.Avoid high temperature, humidity, short circuit, away from the fire & children .
- 5.If the battery leaves unused for a long time, please charge full electricity
- 6.To keep the FM100 function normally, the battery should not used over 2 years.


CHARGE

- 1.When installs the battery, please attention the direction.
- 2.The Li-battery may connect the USB or adapter to charge.**
- 3.Li-battery needs approximately 3 hours to charge full electricity.**
- 4.The full charged battery may play for 10 hours.**
- 5.The best time for recharge is that when lamp shining weak power.
- 6.When the battery is charging , the light 10 is twinkling.**
- 7.When the battery charged full electricity , the light 10 is off.**

NAMES OF ALL PARTS



CONTROL PANEL

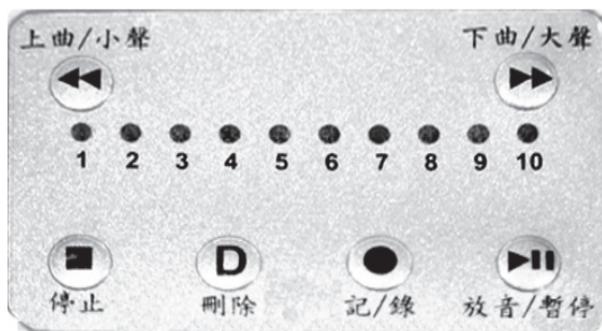

- ◀◀ Backward , Volume down , Low battery recall
- ▶▶ Forward , Volume up , Self-arranged playlist playback
- 1-10 Lamp : Working track , Volume display
- : Stop playing , Stop record , record volume level
- D : Delete / start Transmission mode(connect with PC)
- : Recording , pause , setting self-arranged playing
- ▶|| : play , pause , repeat , recall memory progress

QUICK OPERATION INSTRUCTION

Button	Status	Press	Instruction
◀◀	stand by	short press	jump-to-previous-track
		long press	low battery recall
	playing	short press	volume down
		long press	keep volume down
▶▶	stand by	short press	jump-to-next-track
		long press	self-arranged playlist playback
	playing	short press	volume up
		long press	keep volume up
▶	stand by	short press	start
		long press	recall memory progress
	playing	short press	pause ; restart
		long press	repeat / cancel repeat
■	playing	short press	stop playing/recording
		long press	stop and record volume level
●	stand by	short press	start record
		long press	setting self-arranged playlist
	playing	long press	the progress of music-play can be recorded and that music can be further played
	recording	short press	record pause / record
D	stand by	short press	delete wav file
		long press	connect with PC,Transmission mode started

CHARGER TRANSFORMER

1. Global common use (100VAC~240VAC auto switching type)
2. **Adapter has special specification ,do not use substitute item to avoid damaging FM100.**

INDICATION OF BATTERY-POWER

- 1.fully power : working track lamp light on
- 2.weak power : working track lamp shining every 2 seconds .
- 3.empty power: Every 5 seconds alarm one time, continue 40 seconds

BATTERY POWER EXHAUSTION

- 1.When battery's power empty, FM100 will stop playing and automatically record playback progress . Please power off and replace a new battery
2. After battery replaced , turn on the power , and keep pressing “◀◀” 2 seconds ,FM100 can continuously started from the place where the battery power empty last time.

INSTRUCTION OF LAMP

	status	Descriptive
correct	Power on test	All lamps flash 3 times
	Normal	Lamp of working track on
	Weak power	Flash every 2 seconds
	Connect with pc	Lamp 2 、 4 、 6 、 8 、 10 bright
anomaly	No data in memory card	Lamp shining one by one
	Memory card NG	All lamps on

OPERATION

(1) PLAYING

- 1.Power on → all lamps flash 3 times → the track one lamp bright
- 2.Press ►► or ◄◄ to select track
- 3.Press ►|| to start playing

(2) STOP

『short press』 or 『long press』 has different function

- 1.Playing → press ■ once (short press) → stop playing
- 2.Playing → press ■ 2 seconds (long press) → (one beep sound)
The volume of music-play can be recorded and played from this level next time

(3) VOLUME ADJUSTMENT

In the playback can adjust the volume level

- 1.Playing → press ►► → Volume up one level
- 2.Playing → keep pressing ►► → Keep volume up
- 3.Playing → press ◄◄ → Volume down
- 4.Playing → keep pressing ◄◄ → Keep volume down

(4) REPEAT MODE

- 1.How to set up 『repeat』

(a)choose one track that you want to repeat.

(b)Playing → press ►|| 2 seconds

(c)The playing track will stop 1 second (set up alarm) then continues to play again

- 1.How to release repeat mode

(a)A track is being repeat broadcasting

(b)Repeating → press ►|| 2 seconds

(c)The playing track will stop 1 second (set up alarm) then continues to play again (release "repeat" setup)

(5) RECORDING PLAYBACK PROGRESS

The progress of music-play can be recorded and that music can be further played starting from this progress

- Setting :
1. Playing → keep pressing ● 2 seconds
 2. FM100 sends out 2 alarm sounds
 3. After alarm sounds , FM100 stop playing

(6) RECALL PLAYBACK PROGRESS

1. power on → after opening machine test
2. keep pressing ►■ 2 seconds

(7) SELF-ARRANGED PLAYLIST

Setting :

1. power on → keep pressing ● 2 seconds → (FM100 sends out 2 alarm sound)
2. press ◀◀ or ▶▶ to select track
3. press ● to setup music (FM100 sends out 1 alarm sound)
4. Repeating step 2 and step 3
5. Press ■ to stop setting (FM100 sends out 2 alarm sound)

Play self-arranged playlist:

1. power on → Keep pressing ▶▶ 2 seconds

< EXAMPLE >

exercise 5→exercise 1→exercise 3→exercise 4→exercise 2

1. power on→ all lamps flash three times
2. press ● 2 seconds , FM100 sends out two alarm sounds
3. press ▶▶ until lamp bright on 6
4. press ● once→FM100 sends out one alarm sound
5. press ◀◀ until lamp bright on 2
6. press ● once→FM100 sends out one alarm sound
7. press ▶▶ until lamp bright on 4
8. press ● once→FM100 sends out one alarm sound
9. press ▶▶ until lamp bright on 5

10. press ● once→FM100 sends out one alarm sound
11. press ◀◀ until lamp bright on 3
12. press ● once→FM100 sends out one alarm sound
15. press ■ once→FM100 sends out two alarm sounds
16. finished set up

【Playing self-arranged playlist】

1. Power on →all lamps flash 3 times
2. Press ▶▶ 2 seconds , FM100 play music from track 6
- 3.After playing the self-arranged playlist, the FM100 will return to play again

(8) RECORDING (through USB to copy)

- 1.FM100 supports USB2.0 transmission speed operation.
- 2.FM100 can play MP3 file.
- 3.You can copy computer's music file to FM100 through USB.
- 4.The others music files need paste on FM100's root directory.

5.FM100 only can play the file on DAFAGOOD folder & FM100's root directory.

(9) PLAYBACK LIST

- 1.The folder "DAFAGOOD" is the first cis-position.
- 2.The FM100's root directory is the second cis-position.

(10) DELETE

- 1.The files that in "DAFAGOOD" folder are protected, the "D" button is unable to delete file.
- 2.The "D" button can delete the files that on FM100's root directory.

step:

- (1)Press ◀◀ or ▶▶ to select track try to delete
- (2)Press delete key once, system play music for 3 seconds (confirm alarm) and press delete key again to delete this track
- (3)If didn't finish pressing "D" button again within 3 seconds, FM100 regard as press by mistake, return to the stand by for action

(11) CONNECT WITH PC (through USB)

- 1.Support Windows ME/2000/XP/Vista/7; Unsupported windows 98 , Macintosh (Mac)
- 2.Broadcast mode: use USB to connect with PC
- 3.Transmission mode: use USB to connect with PC,press "D" 2 seconds, the 2.4.6.8.10 light bright.

(12) HOW TO REDEEM FILES

- 1.Use another FM100 (source) and connect with PC
- 2.Copy FM100's files to PC
- 3.Disconnect FM100 (source)
- 4.Connect PC with target FM100
- 5.Copy files from PC to target FM100
- 6.Disconnect

< Attention >

- 1.Sound1 .Sound2 .Sound3 must copy to DVR folder
- 2.When running "delete file" with delete-key or USB ,the function such as "self-arranged playlist" . "progress of music-play record" and "low power record " must be setting again

WARRANTY AND OPERATION INSTRUCTION

- 1.This product enjoys quality guarantee for one year since the day when it is bought. Maintenance is provided free of charge in the period of quality guarantee.
- 2.Battery, earphone ,USB cable are the consumptive material .
- 3.The FM100's battery and adapter have special specification**
- 4.Please do not use the substitute item avoid damaging FM100.**
- 4.The auxiliary parts such as the battery、 earphone can be purchased when needed.





YIHCHYUN BOOK CO., LTD

TEL : 886-2-25533123

FAX : 886-2-25531299

No.229-9, Section 2, Chung-Ching North Road, Taipei, Taiwan

<http://www.yihchyun.com.tw> Email: yihchyun@ms54.hinet.net